


PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF AIRCONCEPTS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF AIRCONCEPTS, INC IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE
		DIMENSIONS ARE IN INCHES TOLERANCES: $\pm 1/32"$ FRACTIONAL ANGULAR: MACH \pm BEND \pm TWO PLACE DECIMAL \pm THREE PLACE DECIMAL \pm	DRAWN	M.H.	1/14/20
		INTERPRET GEOMETRIC TOLERANCING PER:	CHECKED		
		MATERIAL	ENG APPR.		
		FINISH	MFG APPR.		
NEXT ASSY	USED ON		Q.A.		
APPLICATION		DO NOT SCALE DRAWING	COMMENTS:		





**SDR Installation Instruction
Exposed duct**

SIZE	DWG. NO.	REV
A		
SCALE:	WEIGHT:	SHEET 1 OF 1

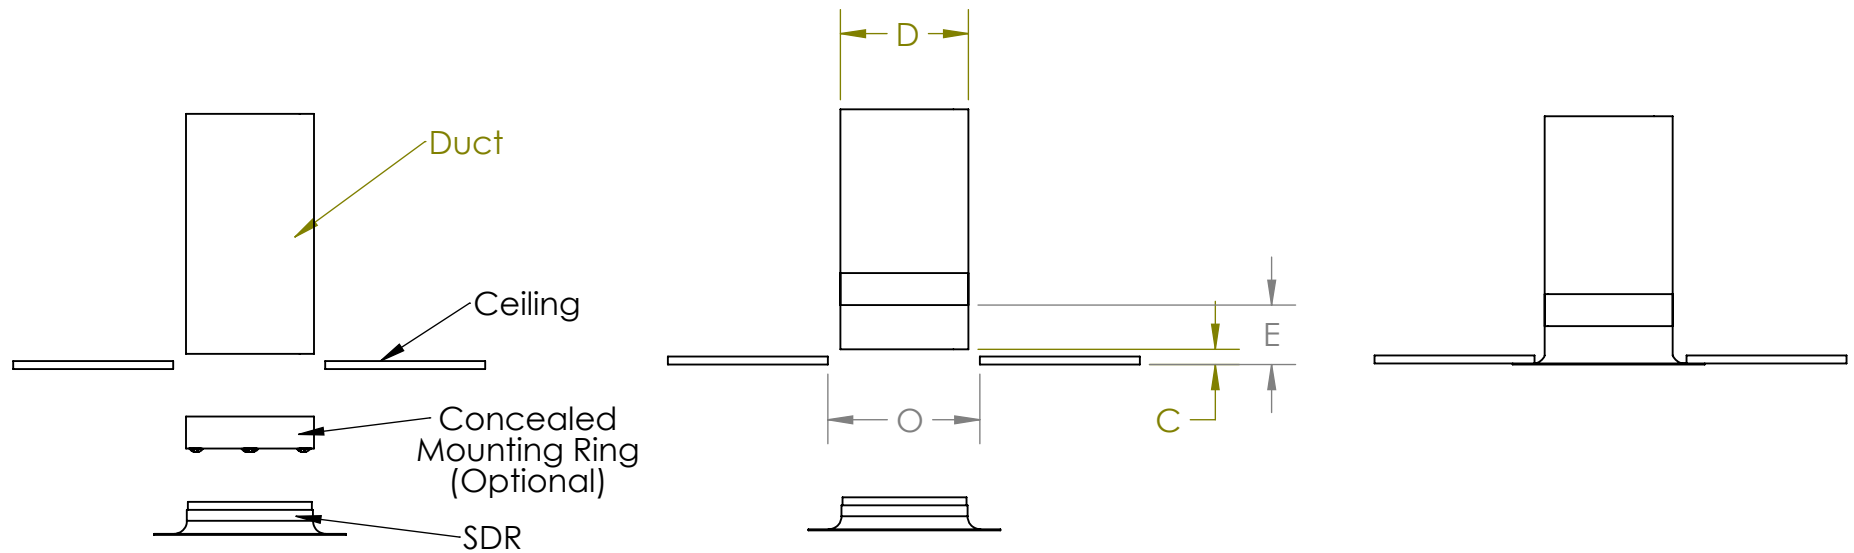

1. Insert the mounting ring into the duct 'E' from the face of the ceiling.
2. Fasten the mounting ring into the duct using the holes at the rear of the mounting ring.
3. Insert the SDR into the mounting ring. Rotate the SDR until it locks into the place. The "U" tabs should fit around the tightening screws.
4. Tighten using a Phillips screw driver.

Model	C	D	E	O
SDR-06	13/16	6	2 1/4	7 1/2
SDR-08	13/16	8	2 1/4	9 1/2
SDR-10	1	10	2 1/4	11 7/8
SDR-12	1	12	2 1/4	13 7/8
SDR-14	2	14	2 3/4	17 7/8
SDR-16	1 1/8	16	2 3/4	18
SDR-20	1 3/4	20	3 1/2	23 3/8
SDR-24	2	24	3 13/16	27 7/8

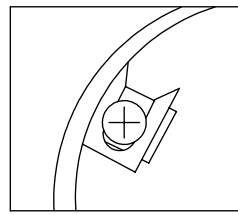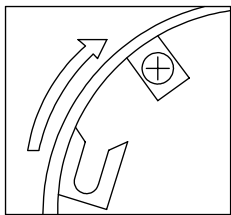

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES TOLERANCES: ± 1/32" FRACTIONAL ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±	DRAWN	M.H.	10/06/14
	CHECKED		
	ENG APPR.		
	MFG APPR.		
INTERPRET GEOMETRIC TOLERANCING PER:	Q.A.		
MATERIAL	COMMENTS:		
FINISH			
DO NOT SCALE DRAWING			

AirConcepts
AIR DISTRIBUTION PRODUCTS

SDR Installation Instruction Concealed Mounting Ring		
SIZE	DWG. NO.	REV
A		
SCALE: 1:12	WEIGHT:	SHEET 1 OF 1